




Dometic Coporation  
Warranty Department  
1120 North Main Street  
Elkhart, Indiana 46514

- A Ramp Stand Pads (2 pcs) with Screws (8 pcs)
- B Ramp Stands (2/10 pcs)
- C Ramp Door Pole Assembly (9 pcs)
- D Fabric Assembly (1 pcs)
- E Ramp Roof Pole Assembly (11 pcs)
- F Ball End Sockets (4 pcs)
- G Ball Ends (2 pcs)
- H Center Ridge Pole (3 pcs)
- I "C" Clip (1 pc)
- J "J" Clip (1 pc)
- K Hook Tape Roll (1 pc)
- L Screws (6 pcs)
- M "J" Hooks (4 pc)
- N Snapfast® Fasteners (2 pcs)
- O Storage Bag (1 pc)
- P Pole Storage Bag (1 pc)

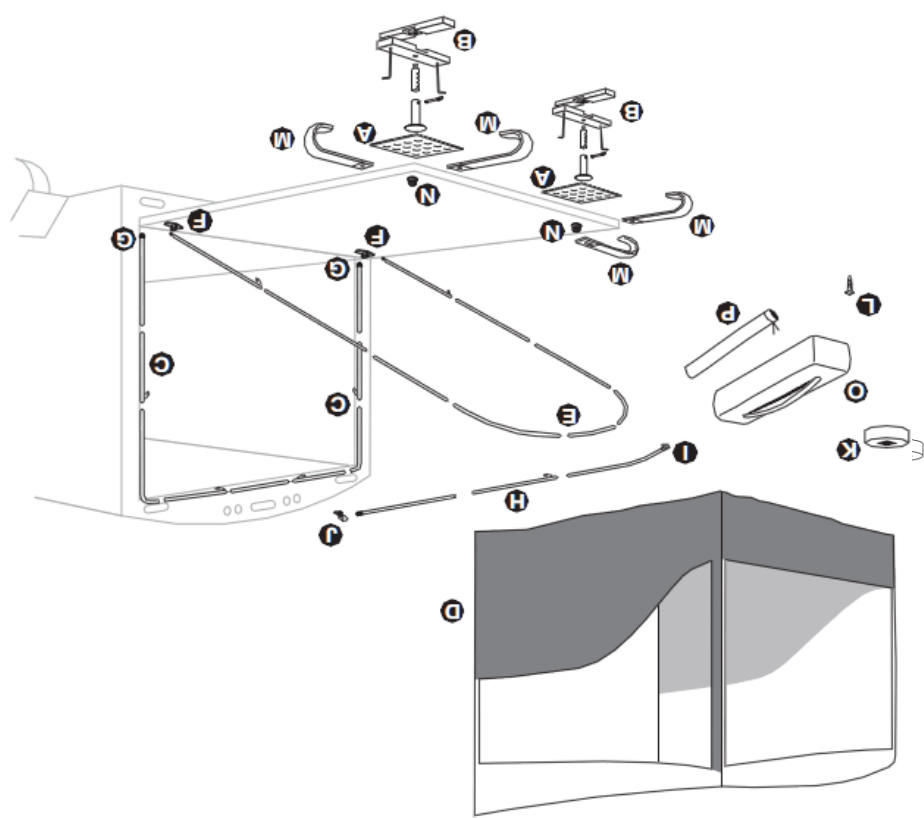

The X Tend A-Room™ is designed to be installed around the loading ramp opening of a cargo type trailer, allowing users to enjoy the extra living space. Product features and specifications as described or illustrated are subject to change without notice. Installation methods not described in this manual must have written approval from Dometic Corporation.

**Important: Read the entire installation and operating instructions carefully before starting the installation.**

**Important: If trailer is equipped with a bed, DO NOT ROLL BED DOWN if room poles are in place.**

REVISION A  
Form No. 3311002.038



Failure to place stands under ramp's door frame could cause damage to door's outer fiberglass surface when ramp is placed under load.



Personal injury may result from falling or stepping off the end of the cargo ramp when the fabric is open and rolled up.



These instructions must be read and understood before installation of this kit. Modification of this product can be extremely hazardous and could result in personal injury and/or property damage.




**To reduce the risk of death, personal injury, fire or damage:**

1. The stand supports the X-Tend A-Room™ and ramp. The stands are designed to support a total of 1,200 pounds including persons, equipment and ramp.
2. Do not use grills, hibachis, camp stove or gas burning lamps inside the X-Tend A-Room™.
3. Never operate generators, motorcycles or any internal combustion engines inside the X-Tend A-Room™.
4. Close attention is necessary when used by or near children. Do not allow children or adults to lean against the sides or front of the X-Tend A-Room™.
5. Do not suspend electrical lights from the rafter poles or allow them to come in contact with the X-Tend A-Room™ fabric.
6. Do not modify or change the installation of this X-Tend A-Room™.
7. Follow all trailer manufacturers instructions regarding ramp use and limitations.
8. Use only as described in this manual.


# 1 Assemble ramp stands.

Install ramp Stand Pads **A** at door corners. Lay sections with the white nylon insert **B2** on the ground, place cross sections **B3** on top, then screw the lower jack pole **B4** into the nylon insert. Sleeve the upper jack pole **B5** over the lower. Lower the RV's ramp and position the ramp stands under the outer corners where Ramp Stand Pads have been installed. Line up the holes and insert the cotter pin **B6** to adjust height and level the ramp.

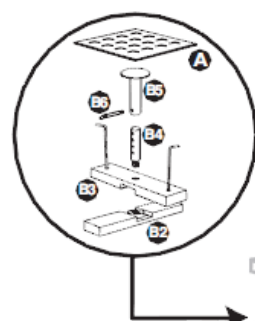

# 2 Lay out the tent for assembly.

Arrange the tent on the ramp with the sleeved edge **D** on top and the privacy panels on the inside.

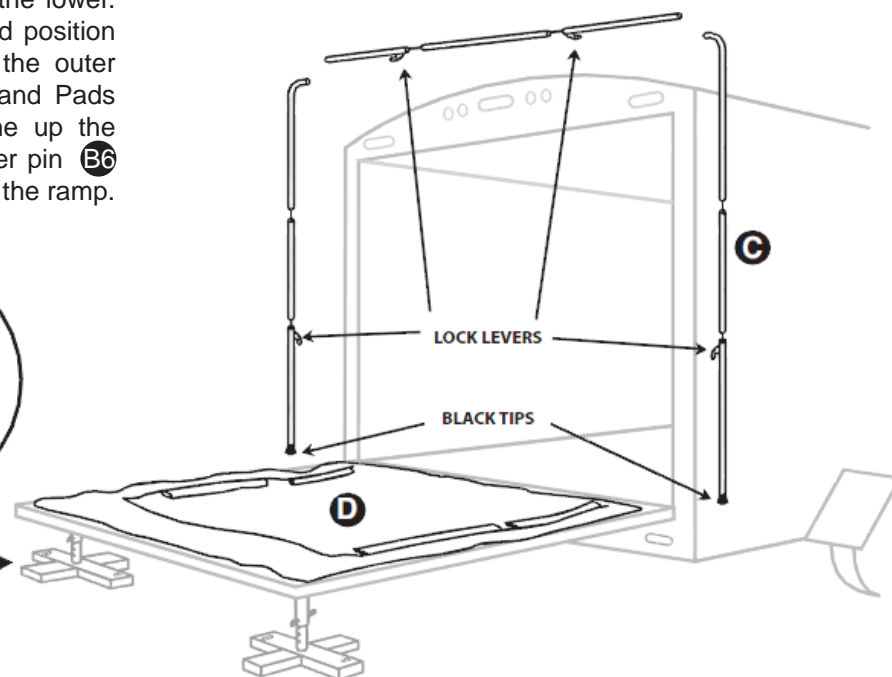

# 3 Assemble the C poles.


Assemble the two vertical poles (black tips on the bottom), extend to their max length and lock the lock levers. Do the same with the cross pole.

# 4 Slide C poles into tent sleeves C2.

Slide the cross pole into its sleeve, and repeat with the vertical poles. Connect the cross pole to the vertical poles and attach the corner straps **C3** to the vertical poles.

# 5 Raise the C pole frame.

With the black tips in the RV's doorway, tilt up the **C** pole frame into the doorway. Have a helper hold it there while you continue assembly FROM INSIDE THE RV AND TENT.

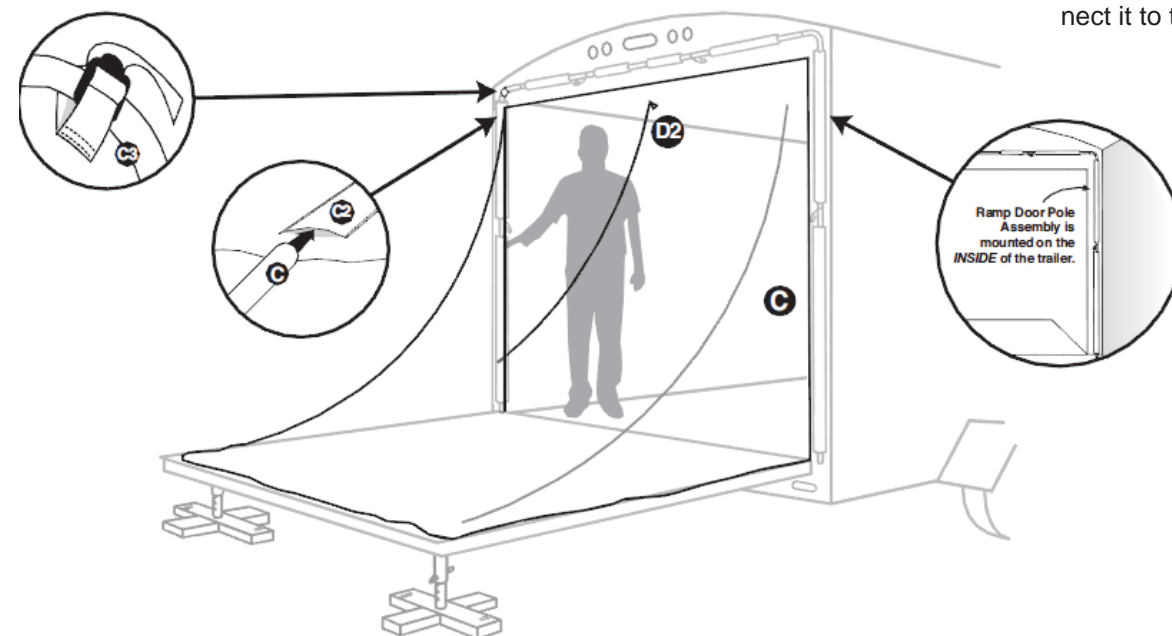

# 6 Adjust the C pole frame to the RV doorway.

Loosen the lock levers and raise or lower the poles to fit. Spread the cross pole and unzip the dart in the roof fabric **D2** to add width if necessary.

# 7 Assemble the E poles and ridge pole.

Bring remaining pole sections inside the RV. Assemble the two vertical poles (ball tip at bottom), extend to max length and lock the lock levers. Snap the ball-socket clips **F** onto the ball tips. Assemble the curved cross pole and connect it to the verticals.

# 8 Raise the tent.

Use the **E** pole assembly at a 45-degree angle to lift the tent at the end of the ramp. Connect the cross pole to the hook & loop tape **E2** that will hold it in position. Angle the vertical poles back to the RV doorway.

# 9 Permanently attach ball-socket clips F to the RV floor.

Find a location that's out of the way of your gear and which will also let you fold the tent forward and close the ramp to get moving. That way, you won't have to completely tear-down / set-up the tent each time you change location. Be sure the widest opening on the socket is facing away from the coach.

# 10 Install fasteners N for corner grommets D4.

Pull the corners of the tent tight, away from the RV and mark the spots where the grommets in the corners contact the ramp. Then drill a 1/8" pilot hole (9/16" if ramp is metal) and install a Snapfast® fastener in each corner. Attach the grommets to the fasteners to further secure the tent.

# 11 Assemble the ridge pole.

Assemble the sections and attach the clip **I** in the center of the **E** cross pole. Snap the J-clip **J** into the ball at the ball end and hook the J-clip into then center of the cross pole in the RV doorway.

# 12 Trim the tent.



Extend the ridge pole and **E** poles to max length, stretching the tent tight without lifting it off the ramp.

# 13 Add hook tape to RV wall.

Once you see how the tent fits in the RV frame, run 12-inch strips of the hook tape along the interior walls of the RV to attach to the loop flaps on the edge of the tent along the pole sleeves. Next time you set up the tent, you can attach it to the hook tape as soon as you have raised the **C** poles into the doorway.

# 14 Secure the tent to the floor.

Hook the elastic cord **D3** (located in the bottom hem of the tent) onto the ramp. If the hooks are too small, connect the J-hooks **M** to the ramp and then connect the cord hooks to the J-hooks.

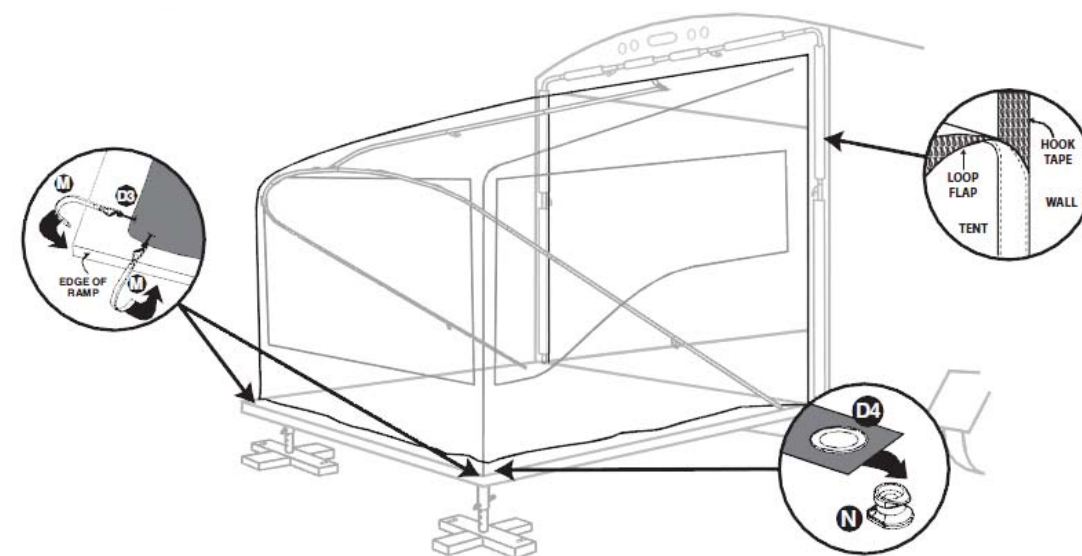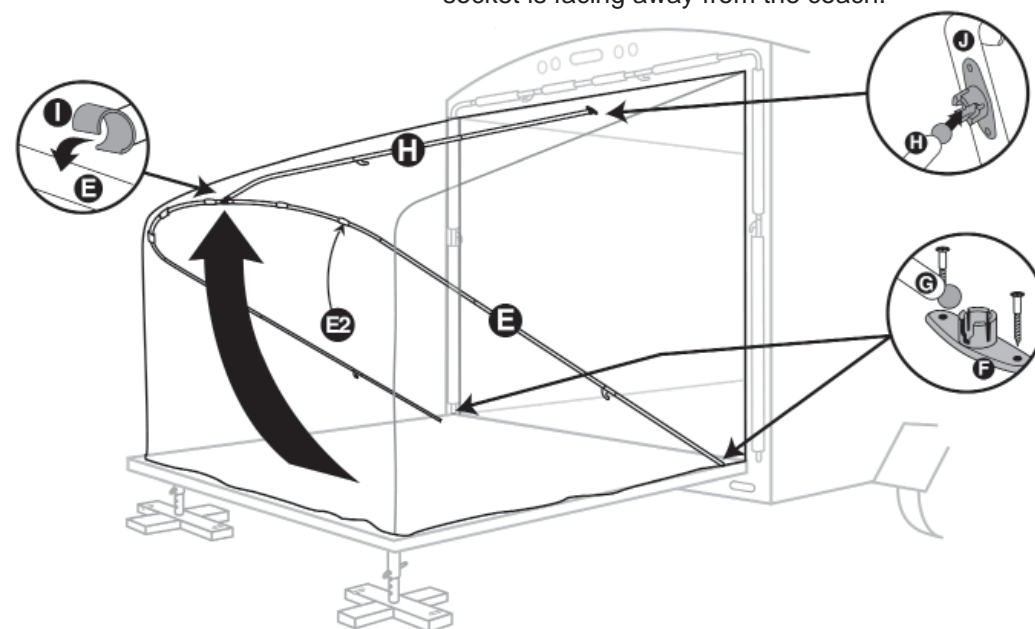

## NOTE:

The RV ramp can be easily closed without having to disassemble the X Tend A-Room™. Just remove pole **E** from **F** socket and remove **H** pole from **J** socket. Also, unhook the J-hooks from the corners of the ramp and set poles inside RV. Then simply close the ramp door while tucking in the fabric.