


Nomadic 270 Awning

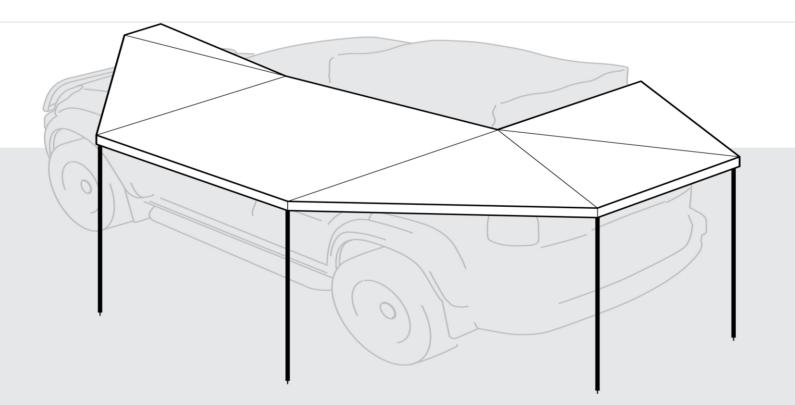

GET TO KNOW YOUR AWNING

We recommend you check all parts are included prior to first use.

Nomadic 270° awning contents

1 270° Awning	6 25mm M8 mounting bolts and	2 Tension
	nuts	straps
3 Mounting brackets	6 Twist-lock leg poles	13 Pegs
6 'U' Bolts with nuts and washers	(3 in a canvas bag)	13 Guy ropes

ATTACHING BRACKET TO ROOF-RACK


The Nomadic 270° awning brackets have been designed to fit most common roof rack configurations. However, ever-increasing number of roof rack designs available it is difficult to supply a mounting bracket to accommodate all. Below are examples of how to mount the Awning brackets to Flat style and Basket style roof racks. The bracket can also be mounted on roof bars, however, additional specific attachment may be need to be sourced from your roof rack supplier.

If in doubt, please visit your roof rack specialist for specific roof rack mounting options and advise on Load capacities

ATTACH AWNING TO BRACKET

We recommend using an experienced after-market 4x4 Accessories fitter to mount the Awning to your vehicle. Fasteners and fixing connections should be checked regularly on both the awning and *root* rack to ensure the awning is always mounted securely to your vehicle roof rack.

PROLONGED TRAVELING ON UNEVEN ROUGH OR CORRUGATED TERRAIN WILL REQUIRE MORE FREQUENT INSPECTIONS.

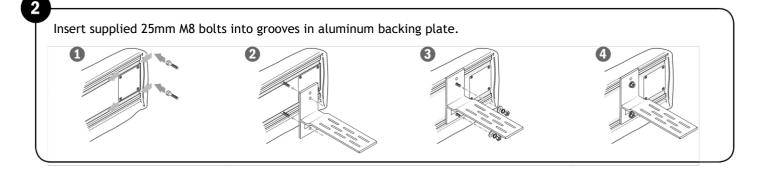

Nomadic 270° awning


SET-UP & CAREINSTRUCTIONS

SET-UP

3

Remove Cover


Unzip cover and fold it over the awning body

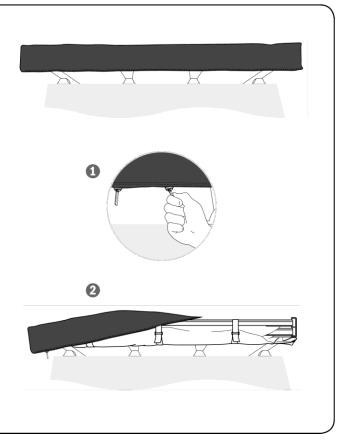




Release Awning

Release the three Velcro straps and allow canvas to drape

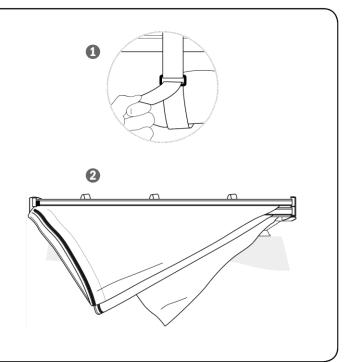

SET-UP&CAREINSTRUCTIONS

SET-UP

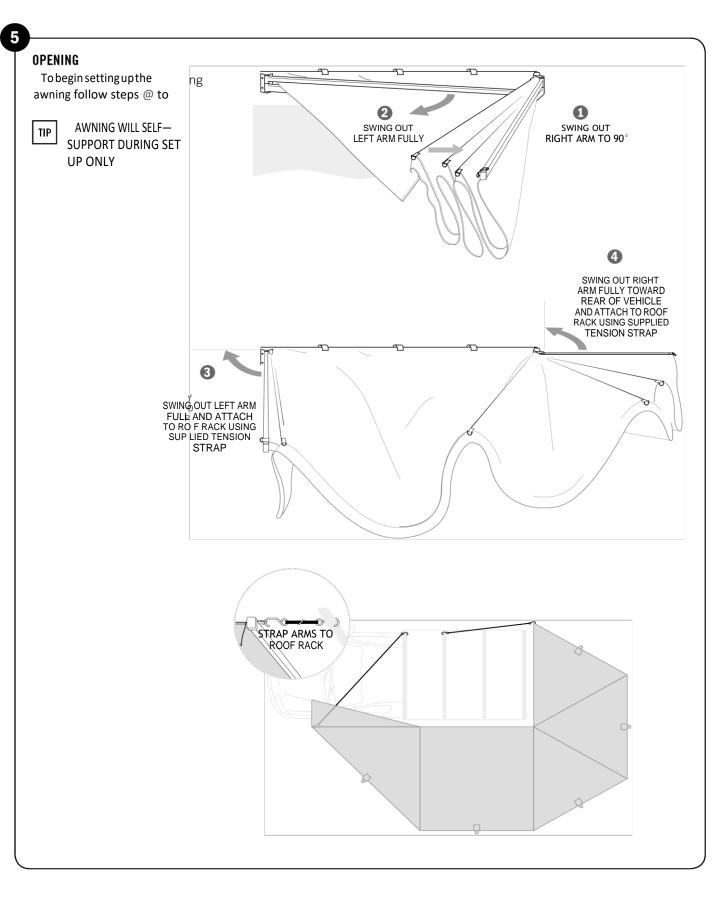

ิก

SET-UP&CAREINSTRUCTIONS


SET-UP

POLE SET-UP

- Undo the Velcro straps securing each support leg. Leg will pivot down to a vertical position. Adjust to desired height by unlocking and locking the internal twist locking mechanism.
- Attach individual support legs to the remaining rafters by inserting into holes at the end of each rafter.
- Secure the end of each rafter by anchoring and tensioning guy ropes.
- Ensure all guide ropes are secured


IF ATTACHING OPTIONAL WALLS, EACH RAFTER MUST BE SUPPORTED BY A LED POLE. TIP


IN CASE OF RAIN, LOWER THE SUPPORT LEGS TO ALLOW DOWNWARD SLOPE AND GUY OFF BETWEEN RAFTERS TO FORM VALLEYS FOR WATER RUN-OFF.

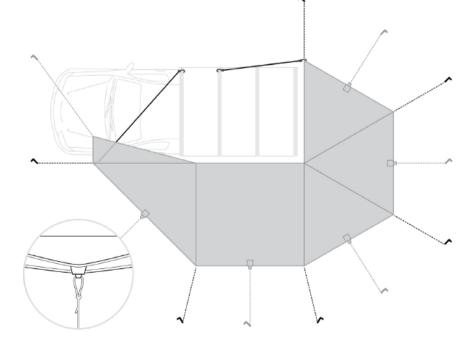

SET-UP&CAREINSTRUCTIONS

PACK-DOWN

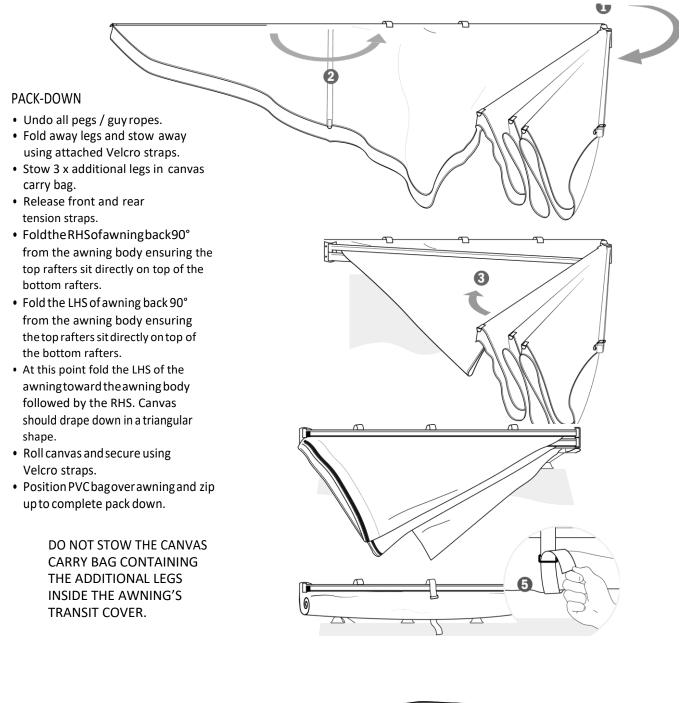



CARE INSTRUCTIONS

Cleaning

Clean with cold water and a soft bristle brush. Do not use soaps and detergents. Do not expose to petrol, diesel, oils or chemicals of any nature.

STORING

Correct storage is vital for the longevity of your Nomadic 270° awning. If on occasion the awning is required to be stowed wet, it is essential it is unpacked and dried as soon as possible. Rot, mildew damage and incorrect storage is not covered under warranty.

STRUCTUALINTEGRITY

The Nomadic 270° awning has been designed for general camping use under normal conditions. Always ensureall guy ropes are anchored correctly. It may be necessary tore-adjust guy ropes and pegsattimes to maintain the structural integrity of the awning.

Toavoid chances of personal injury and property damage, we highly recommends the Nomadlc 270° Awning should NOT be erected during windy conditions.

Damaged caused by wind and or adverse weather will not be covered under warranty.

VEHICLE FITTING

Werecommend using an experienced aftermarket 4x4 accessories fitter to mount the Nomadic 270° Awning to your vehicle. Fasteners and fixing connections should be checked regularly on both the awning and roofrack to ensure the awning is always mounted securely to your vehicle root rack. Prolonged travelling on uneven rough or corrugated terrain will require more frequent inspections.

- KEEP ALL FLAMES AND HEAT SOURCES AWAY FROM THE FABRIC
- UNDER NO CIRCUMSTANCES SHOULD ANY NAKED FLAME SOURCES BE USED NEAR THE AWNING, KEEP FIRES AWS FROM THE AWNING
- KEEP A LOOK OUT FOR ANY AIRBONE BURNING EMBERS THAT MAY COME IN CONTACT WITH THE TENT. KEEP A FIRE EXTINGUISHER OR BUCKET OF WATER NEAR BY
- DO NOT OPERATE ANY DEVICES WHICH BURN FUEL INSIDE THE AWNING WHILE THE WALLS ARE ATTACHED.
- KEEP EXITS CLEAR
- REMAIN CAUTIOUS WHEN GUIDE ROPES ARE IN USE
- KEEP AN EYE OUT FOR CHILDREN WHEN AWNING IS IN USE

Nomadic 270° Awning brackets have been designed to fit most common roof rack configurations. However, with the everincreasing number of roof rack design now available it is difficult to supply a mounting bracket to accommodate all. If in doubt, please visit your roof rack specialist for specific roof rack mounting options and adviceonloadcapacities.

FIXING THE OPTIONAL WALLS

The zip on awning walls will provide a sheltered / protected area around the awning. When attached to the awning, they are designed to create a shaded area and help reduce dust.

IN WINDY CONDITIONS IT IS HIGHLY RECOMMENDED NOT TO ERECT THE AWNING AND WALLS AS PERSONAL INJURY AND OR PROPERTY DAMAGE MAY OCCUR.

For any further questions, please contact Overland Vehicle Systems at 833.226.4863 or visit www.overlandvehicelsystems.com